

MOBILIZE

Lubricious Compounds for Surface Friction Management

Lubricious solutions in:


- Polyolefins
 - * LLDPE
 - * LDPE
 - * HDPE
 - * PP
- Styrenics
 - * CPS
 - * HIPS
 - * SAN
 - * ABS
- Polyester
 - * PET
 - * PBT
- Polycarbonates
- Polyamides
 - * 6
 - * 6/6
 - * 6/10
 - * 12
 - * 6/12
- Polyurethanes
- Thermoplastic Elastomers
 - * Hytel
 - * Pebax
 - * SBCs

Compounding Solutions has taken a major step forward in the field of friction as it relates to medical device technology. We are very pleased to bring Mobilize to the industry! This unique and proprietary blend is an additive which our team researched and tested to provide our customers with a low cost alternative to other more traditional lubricious materials.

Mobilize provides Lubricious Solutions For:

- Ease of Device moving through Catheter tube.
- Potential removal of FEP, PTFE, HDPE liner during processing.
- Ease of entry into the body.
- Biocompatible.
- No adverse effects on bond-ability
- Radiopaque Fillers: Bismuth SubCarbonate, Bismuth OxyChloride, Barium Sulfate, Tungsten
- Custom Colored Compounds

Based on independent third party testing (See back) our Mobilize additive can achieve COF (Coefficient Of Friction) results at or near FEP with a reasonably low loading level so as not to affect the original properties of the base material to which it is being added. The additive offers significant reductions in the force required to insert or retract a device. Ease of operation equates to a better device that is more easily handled, produced, and accepted in the marketplace.

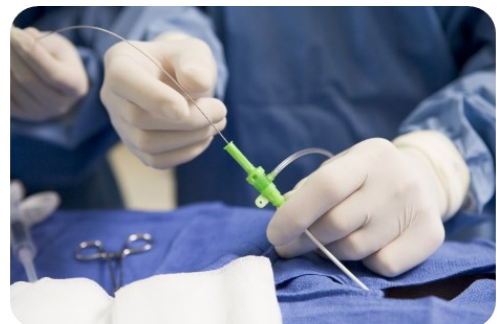

In an extrusion format, for instance, the additive allows the base material properties to largely remain and as a result the process stability is good which makes the additive a great option for any operations that can run simple single lumen tubing. The added benefits of Mobilize, above and beyond the standard base material properties, can provide a low cost solution for inner liners helping to greatly reduce the cost of a device that needs a lubricious inner surface yet does not need the full effect of a material like PTFE.

Compounding Solutions
258 Goddard Road
Lewiston, ME 04240

Phone: 207-777-1122
Fax: 207-777-1566
info@compoundingolutions.net
www.compoundingolutions.net

Find us on:



MOBILIZE

Surface Friction Management in PEBA's

Compounding Solutions' has tested the mobilize lubricious additive package in common medical catheter tubing materials such as Polyether block amides (Arkema Pebax) and Thermoplastic Polyurethanes (Lubrizol Pellethane).

Mechanical Properties

Test	ASTM Standard	Units	Material	
			Pebax 6333 SAO1 MED	Pebax 6333 SAO1 MED. MOBILIZE
Melt Flow Index	D1238	g/10min	14.4	19.58
Specific Gravity	D792	g/cc	1.0166	1.0243
Hardness	D2240	Shore D	62	60
Tensile Strength	D638	PSI	5070	4000
Elongation	D638	%	430	370
Flex Modulus	D790	PSI	45.2	41.4
Tear Strength	D624	lbf/in	1060	1030
Peel Test	In House*	lbf/ft	7.43	7.6

* Peel Test performed using 90deg peel sample of Test material thermally bonded with Pebax 4533 SAO1 MED

Pushability & Retractability Testing

Sample Description	Max Insertion Force (g)	Position at Max Insertion (cm)	Average Force (g)	Max Retraction Force (g)	Position at Max Retraction (cm)	Average Force (g)
Pebax 6333 SAO1 MED, Mobilize	38.9508	19.8186	9.46	-19.8127	25.3779	-0.0839
Pebax 6333 SAO1 MED Natural	50.4673	19.99	16.67	-32.5126	30.9398	-0.4268
Pebax 6333 SAO1, 20% BaSO4 & (Competitors Additive)	93.3189	19.947	32.1	-58.4196	33.0673	-0.8714
HDPE	75.46	20.3	33.19	-52.58	30.36	-25.85

Compounding Solutions
258 Goddard Road
Lewiston, ME 04240

Phone: 207-777-1122
Fax: 207-777-1566
info@compoundingolutions.net
www.compoundingolutions.net

Find us on:



Disclaimer: Compounding Solutions strictly prohibits the use of any Mobilize compounds, including medical grades, in applications that are implanted in the body or in contact with bodily fluids or tissues for greater than 30 days. Unless Compounding Solutions otherwise expressly agrees by written contract, the Compounding Solutions trademarks and the Compounding Solutions name shall not be used in conjunction with customers' medical devices, including without limitation, permanent or temporary implantable devices, and customers shall not represent to anyone else, that Compounding Solutions allows, endorses or permits the use of Compounding Solutions products in such medical devices. Further, all implantable medical devices, whether permanent or temporary, carry a risk of adverse consequences. With regard to implantable medical devices, you should not rely upon the judgment of Compounding Solutions. Any decision regarding the appropriateness of a particular medical device in a particular medical application or for a specific clinical use should be based upon the judgment of your physician, medical device supplier and the United States Food & Drug Administration and/or the European process of Medical Device notification. Unless otherwise specifically stated by Compounding Solutions in writing, Compounding Solutions does not perform clinical medical studies on implantable medical devices. Compounding Solutions cannot weigh the benefits against the risks of a device and does not offer a medical judgement on the safety or efficacy of use of any Compounding Solutions product in a medical device. The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, COMPOUNDING SOLUTIONS expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN. The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. The user should thoroughly test any application before commercialization. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement.

See Safety Data Sheet for Health & Safety Consideration